


REPACKAGING WOODEN DUAL RAIL WATERROWER: RAILS

PREP WHAT YOU'LL NEED...

Packing Tape



*Shipping Boxes



Use original packaging or contact customer service to reorder at rent@waterrower.com or call (401) 247-7742 and ask for the rental department.

PREP SHIPPING BOXES...



2 Rail Boxes

STEP 1

- (A) Assemble the rail boxes. Lay the box flat with the text facing down.
- (B) The highlighted section will be the bottom of the box.
- (C) Fold up the first side of the box to be parallel with the bottom of the box.
- (D) Take the other edge of the box and fold inward.

A



B



C



D



STEP 1 CONTINUED...

(E) Line up the edges of the box and tape across the seams.

(F) Fold in the bottom of box.

(G) Fold one of the pieces in half.

(H) Fold the piece over the box opening.

(I) Repeat steps (G) and (H) for the other side of the box.

(J) Tape the bottom of the box. Repeat step 1 for the other rail box before you continue repackaging.

E



F



G



H



I




J



STEP 2

(A) To identify your rails, use the black extrusions as your guide. Be sure they are facing towards each other and on the inside of the rails. From the rowing position, determine the left rail and the right rail.

A

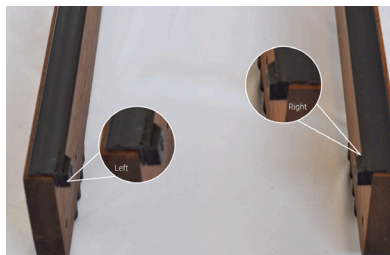

STEP 3

(A) Flip the right rail so the rubber feet are facing upwards and the extrusion facing outwards.

(B) Take the left rail and turn it 180 degrees so the extrusion is facing outward and on the opposite side from the right rail.

(C) Take one of the rail boxes and place the longer edge on the ground.

(D) Make sure the rail box has the dividing cardboard in the middle of the box that will separate the rails.


A




B



C

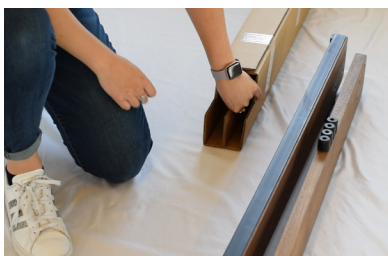

D

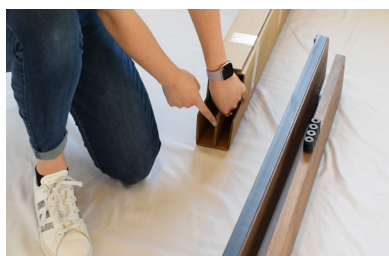

*REMINDER: Make sure you have removed the dolly wheels from the rails before repackaging.

STEP 4

(A) Take the left rail and slide into the box, extrusion side first, with the rubber feet facing down.

(B) Slide the right rail into the box with the rubber feet facing upward, extrusion facing outward.

*PLEASE NOTE: The rails should slide into the box easily. If you have to force the rails into the box: double check the boxes are correctly assembled and the rails are aligned properly.

A



B



STEP 5

(A) Make sure the rails are divided by the center cardboard when sliding the boxes together.

(B) Position the box with the longer edge closest to you. You may need to separate the rails slightly when sliding the boxes together.

(C) It may help to stand the boxes upright to slide the boxes together.

(D) Double check that the edges of the boxes line up.


A




B



C

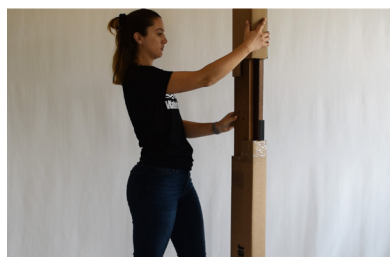

D

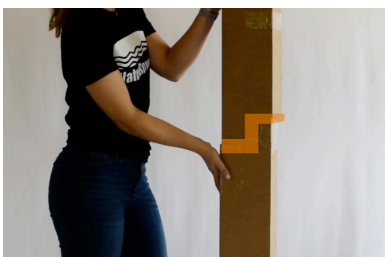

STEP 5 CONTINUED

(E) Tape the 2 boxes together.

E

